# **Skip with Multi-Partition v2.1 BBM User Manual**

## **General Description and Name**

This BBM is on the basis of Skip with Multiple Partition. And add special range of blocks to do special process, which is two-blocks skip pattern.

#### **Relevant User Options**

The following special features on the special features tab apply to this scheme. The default values might work in some cases but please make sure to set the right value according to your system.

Please note only the below special feature items are related to this scheme and ignore any others. If any of below items doesn't exist, please check whether the right version has been installed or contact Data I/O for support by submitting Device Support Request through this address:

http://www.dataio.com/support/dsr.asp

<u>Bad Block Handling Type</u> = "Skip with Multi-Partition v2.1"

<u>Spare area</u>: Please refer to "Description of common NAND special features.pdf". *Normally set as "Enable" for this BBM*.[Default 'Disabled']

<u>SWP: Special Range Start Block</u> = Default 509.

SWP: Special Range End Block = Default 3708.

#### **Special Notes**

None.

### **Revision History**

V1.0 Nov-15, 2010 Create this spec.

#### **Appendix**

You can get the file "Description of common NAND special features.pdf" from http://ftp.dataio.com/FCNotes/BBM/